




CD/DVD Player


Startup Guide / Guide de démarrage / Anleitung für die Inbetriebnahme / Snelstartgids / Guida all'avvio / Guía de inicio rápido / Guia de Início Rápido / Οδηγός εκκίνησης / Startvejledning / Käynnistysopas / Uppstartguide / Instrukcja uruchamiania / Příručka spouštění / Használatba vételi útmutató / Ghid introductiv / Başlangıç Kılavuzu / Руководство по началу работы / Посібник із налаштування

1


A

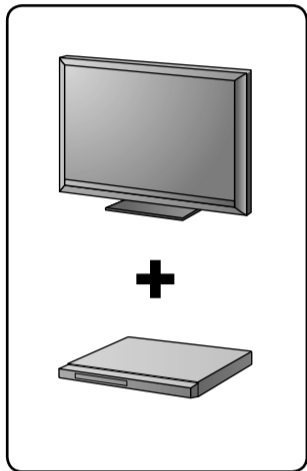


■ HDMI

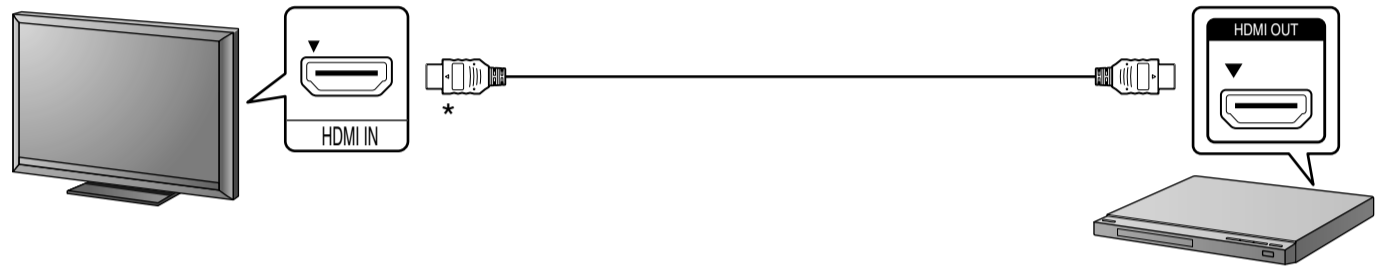


■ COMPONENT VIDEO & AUDIO

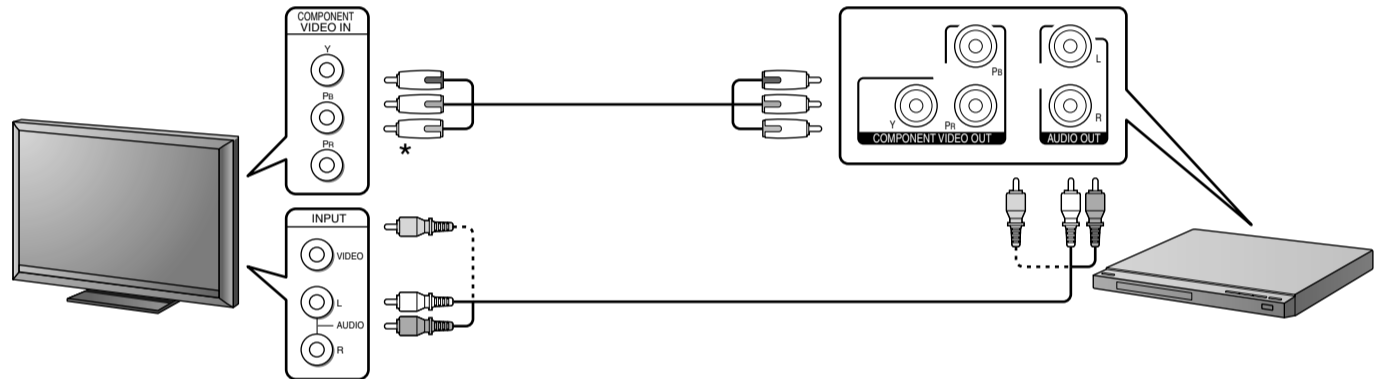


■ VIDEO & AUDIO

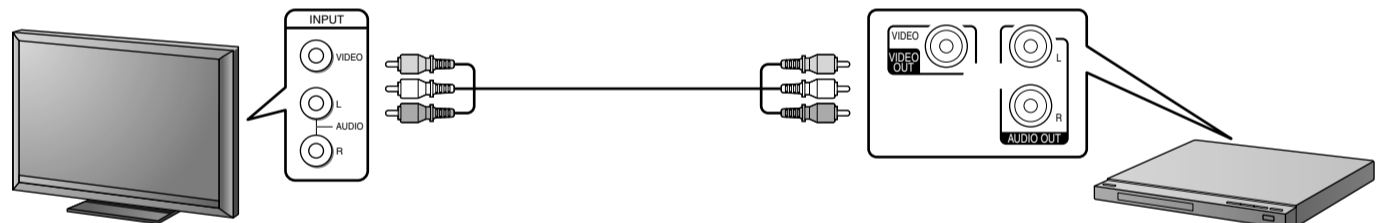


B

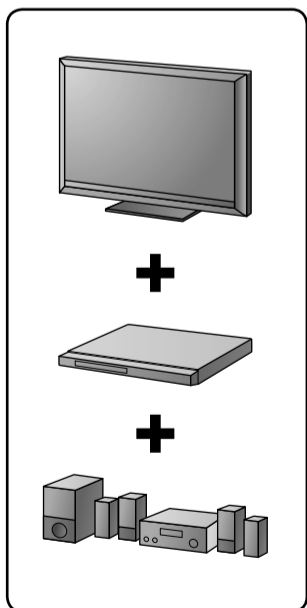

■ HDMI

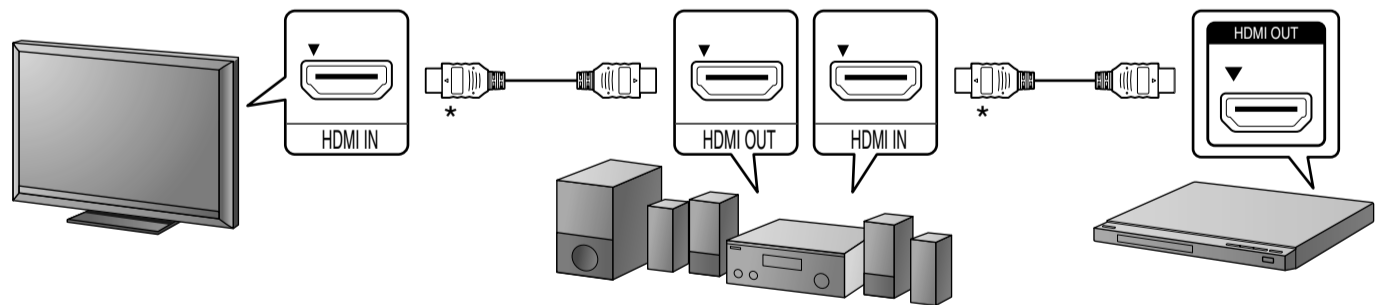


■ COAXIAL

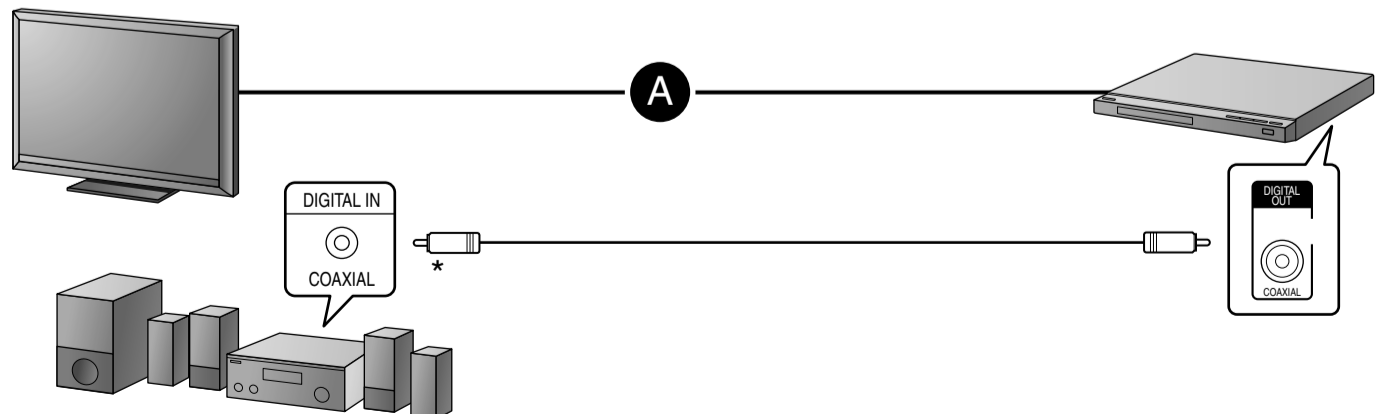


* Not supplied / Non fornito / Nicht mitgeliefert / Niet bijgeleverd / Non in dotazione / No suministrado / Não fornecido / δεν παρέχεται / Medfølger ikke / Ei sisälly vakiovarusteisiin / Medföljer ej / Nie należy do wyposażenia / Není součástí dodávky / Külön megvásárolható / Nu este inclus / Birlikte verilmez / Не прилагается / Не поставляется

2



1

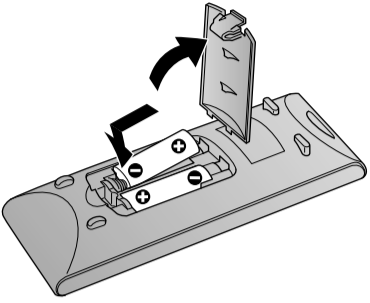

2

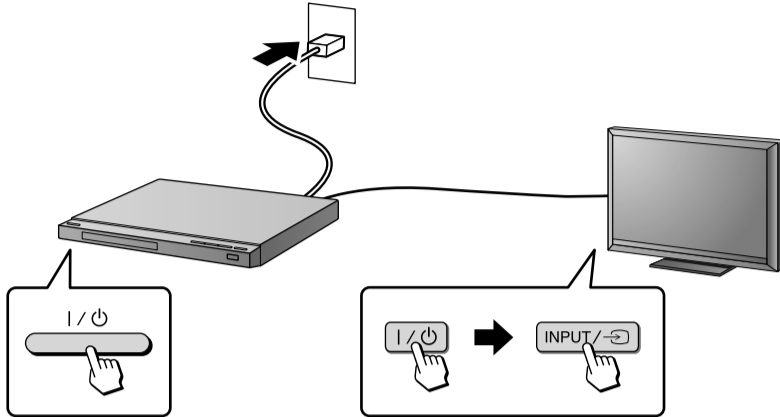


3

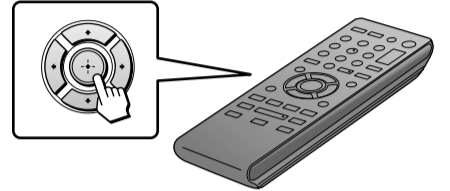
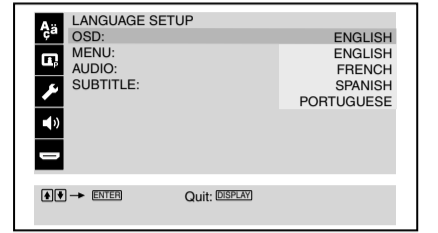


3

1

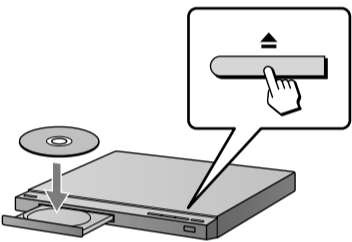

2

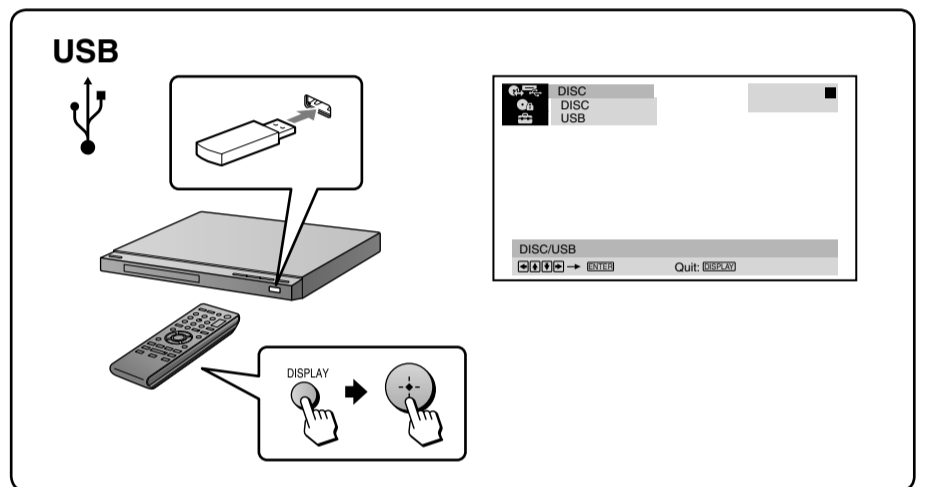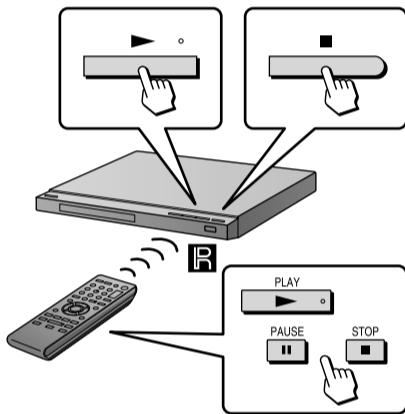

PICTURE NAVI

TOP MENU

MAIN MENU

- LANGUAGE
- SUBTITLES
- INFORMATION

TIME/TEXT

AUDIO

1: ENGLISH DOLBY DIGITAL 3/2.1

SUBTITLE

1: ENGLISH

A mountain towers over a lake.

MENU

CHAPTER

- Chapter 1
- Chapter 2
- Chapter 3
- Chapter 4
- Chapter 5
- Chapter 6

DISPLAY

1 (1)
1 (12)
T 0:00:00
DVD VIDEO

PLAYBACK CONTROLS

- Fast Play: FF, FL, FS, FR
- Pause: PAUSE
- Stop: STOP
- Play: PLAY
- Still: STILL
- Repeat: REPEAT
- Shuffle: SHUFFLE