



SRS-XB31



4-734-038-12(1)

©2018 Sony Corporation Printed in China




\* 4 7 3 4 0 3 8 1 2 \* (1)





# 1

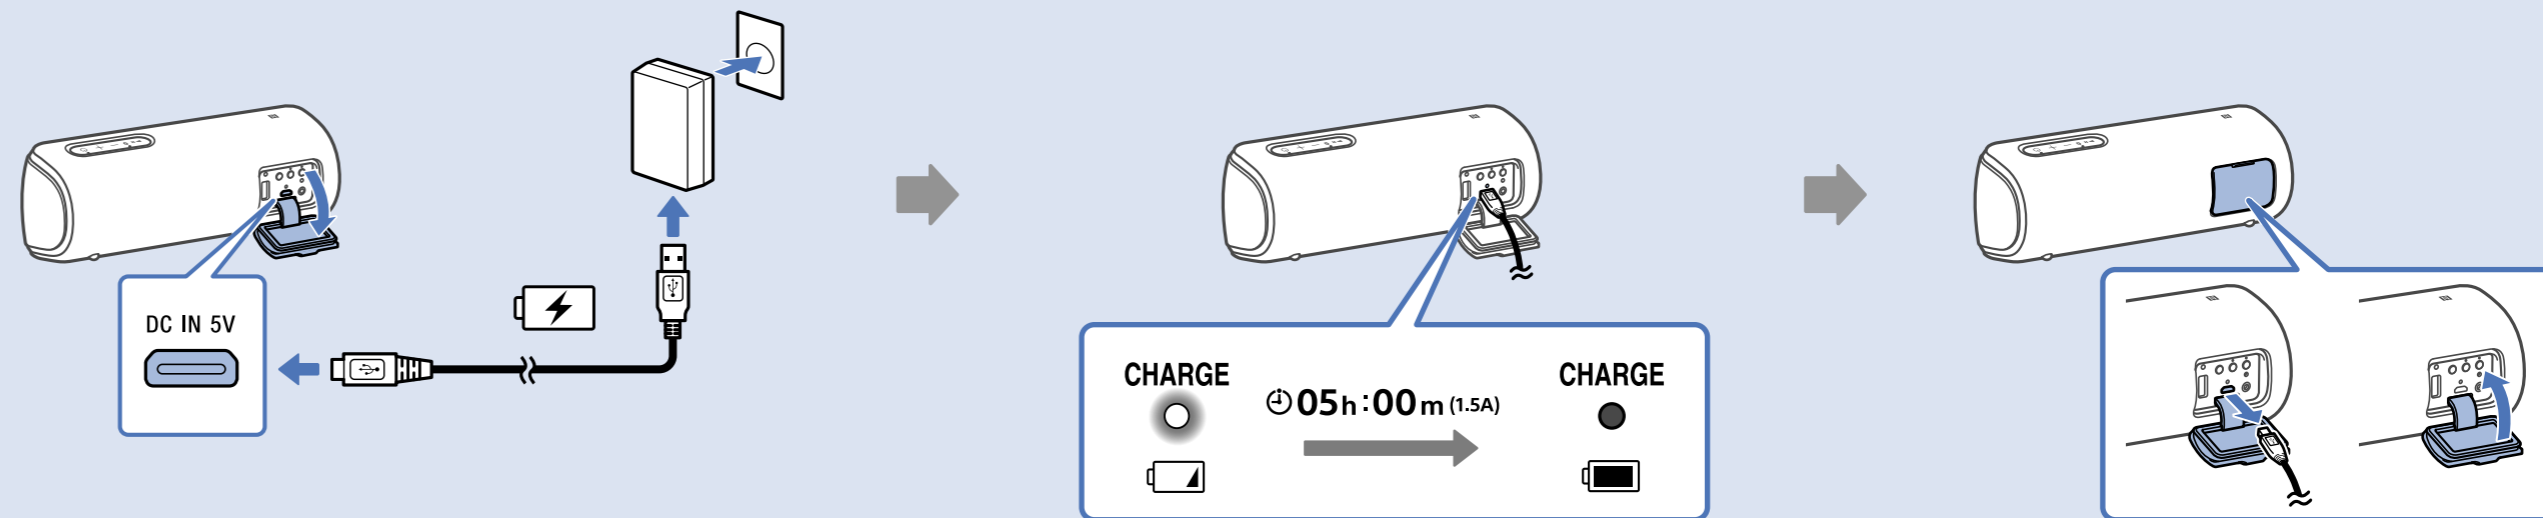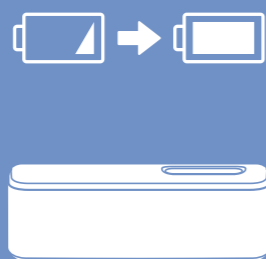

# 2

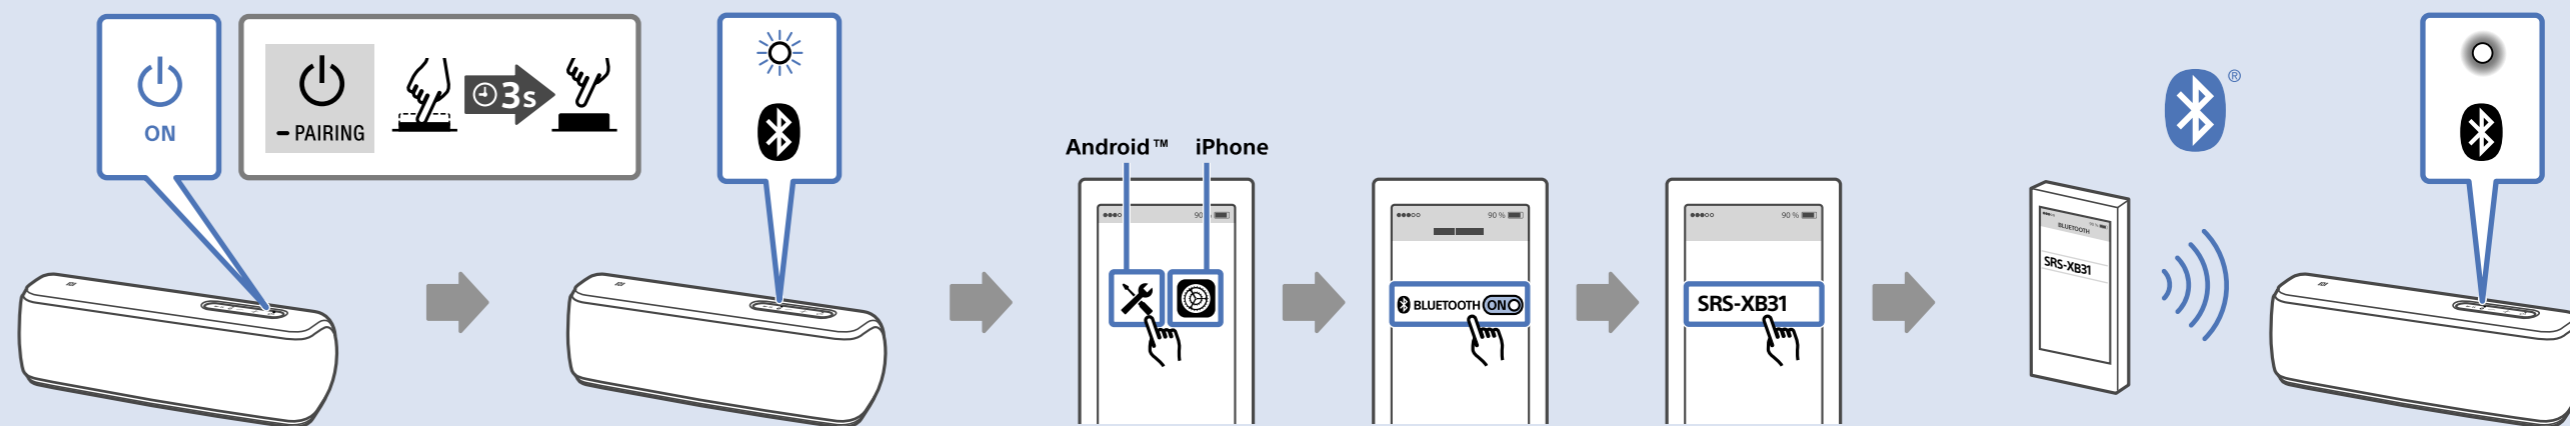

# 3

 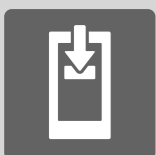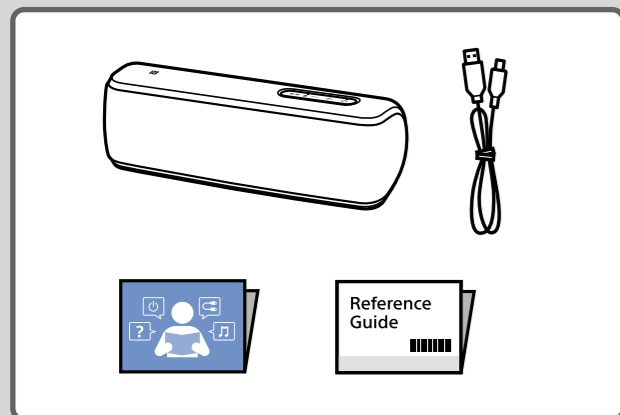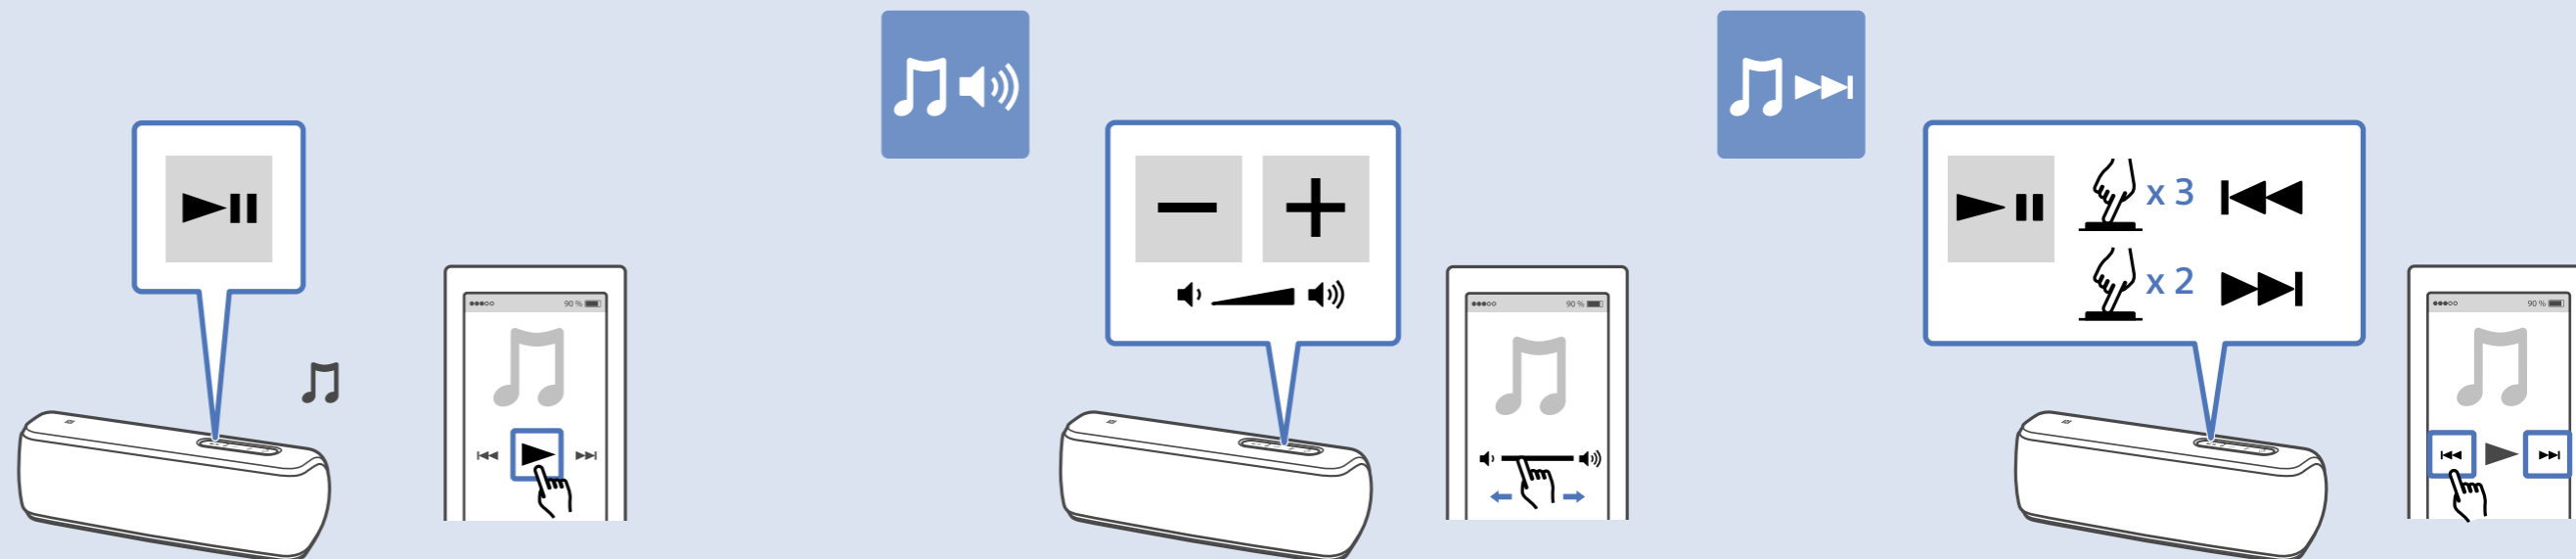

Android / iPhone




<http://www.sony.net/smcpp/>




Sony Music Center




LIGHT

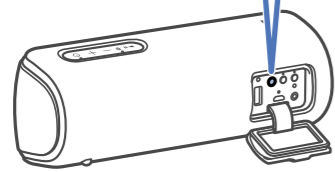





ON

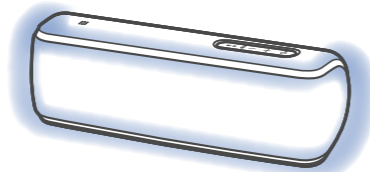




OFF

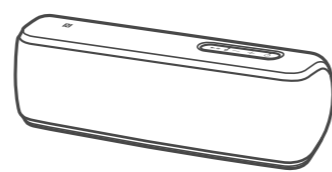




Wireless Party Chain

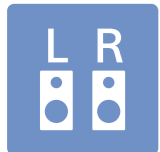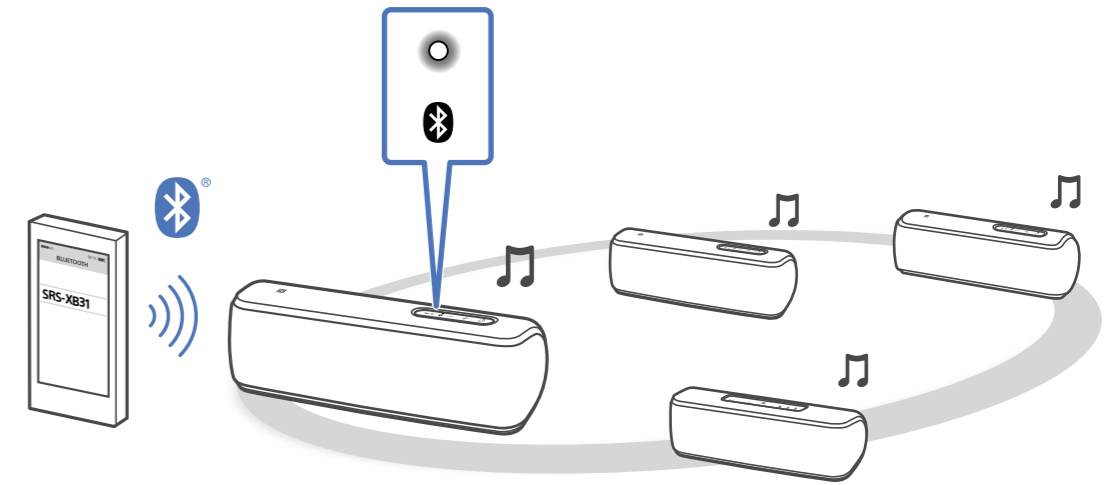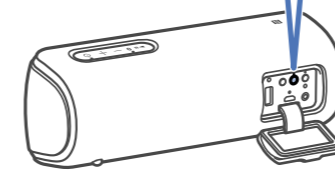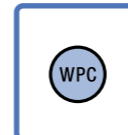

Speaker Add

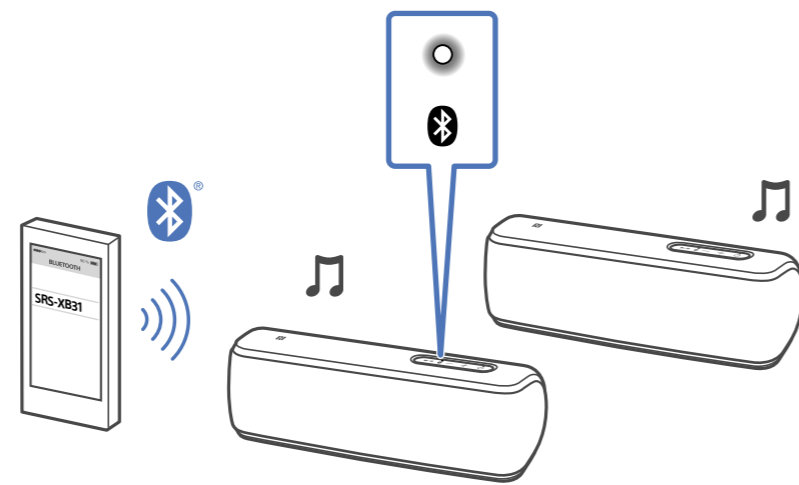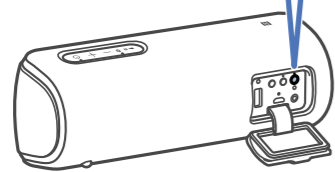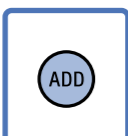

Android

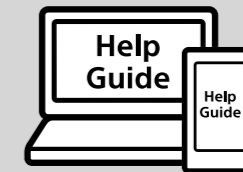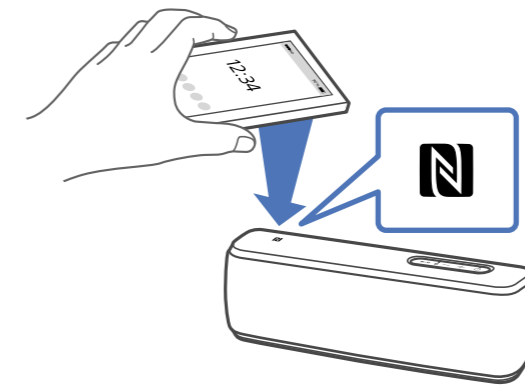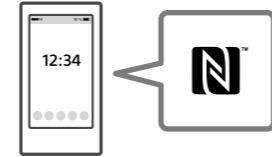

Speaker Add  
Wireless Party Chain  
Party Booster



[http://rd1.sony.net/help/speaker/srs-xb31/h\\_zz/](http://rd1.sony.net/help/speaker/srs-xb31/h_zz/)